

## PRESSURE SWICH PC-SK2 MANUAL

If the pressure of turning on and off is inconsistent with the needs of the user, he or she may change this range by adjustment of the pressure switch.

The pressure of switching on and off can be set in the range from 1.5/ 4 bar, at a minimum difference between the pressure of switching on and off- 1.5 bar.

Regulation includes:

- turn off power supply by taking the plug out of the socket,
- unscrew the screw fastening the casing of pressure switch and remove the cover,
- adjust switching pressure by the large (**B**) adjusting screw and a nut (a screw with a spring). By turning it clockwise we increase pressure, by turning it counter-clockwise we reduce pressure.
- shutdown pressure should be set by regulation of the other, smaller (**A**)screw with a nut by turning it clockwise we increase pressure, by turning it counter-clockwise we reduce pressure.

